

# Installation Guide For Style CRD5027BN

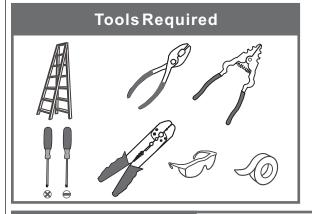

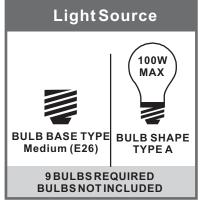

Option 1 (socket up): Fixture Height Adjustable 32" to 129.5"

#### ⚠ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

### **Package Contents**

**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

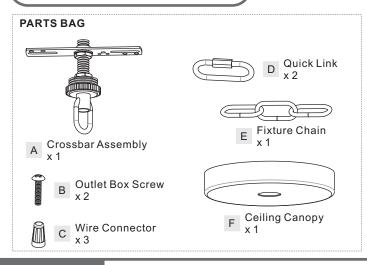

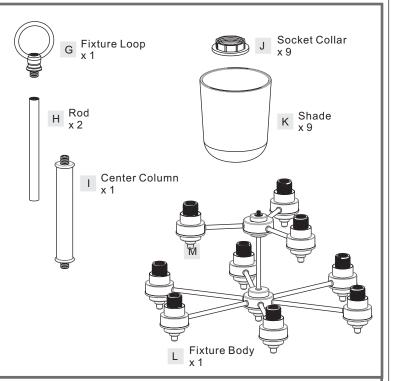


# Table of Contents





 Crossbar






Ceiling Canopy


STEP 5





### STEP 1

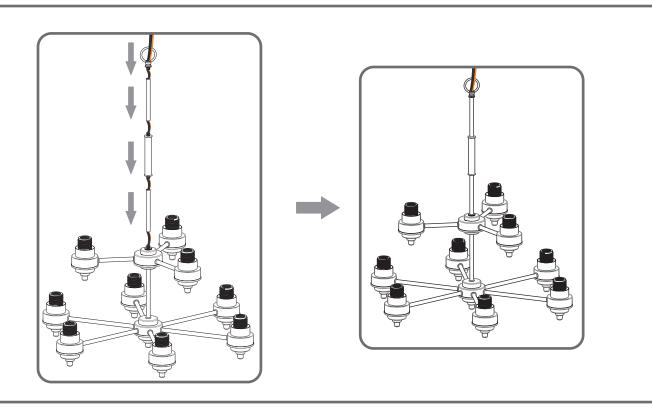




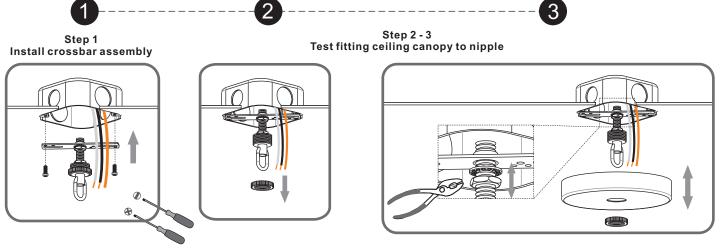

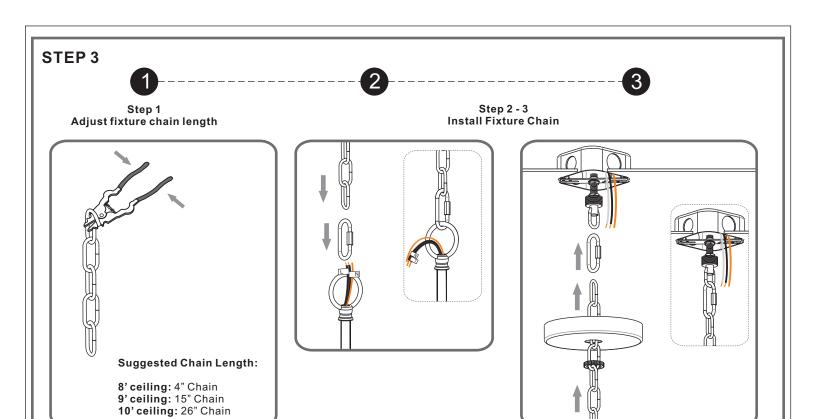

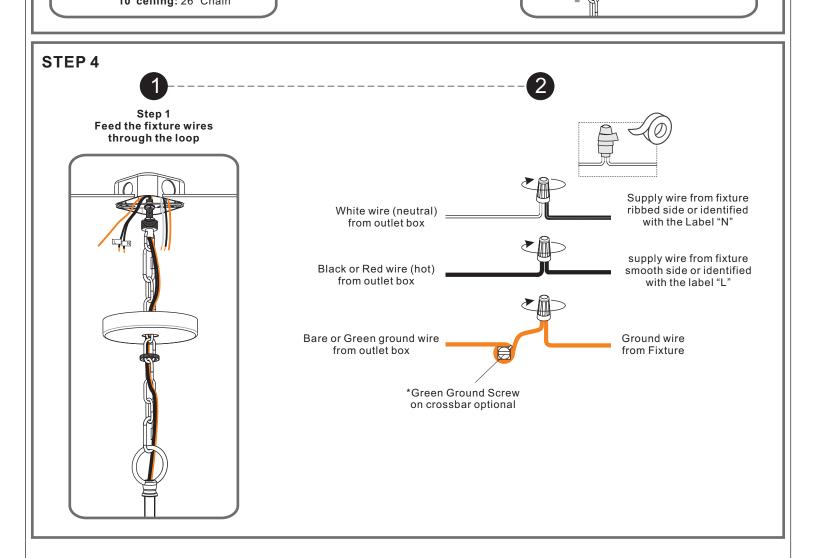

## STEP 5

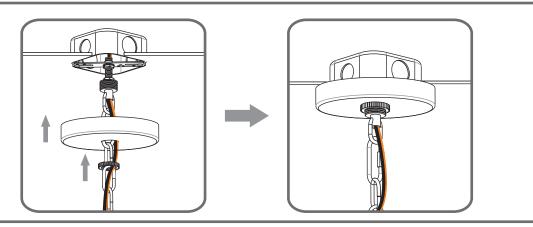

### STEP 6

