

Assembly Instruction Sheet #IS-PCBZ1616C_R3 For Style PCBZ1616C

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 22W

Compatible Dimmer Switches: Lutron DVELV-300P or Lutron SELV-300P.


Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

A Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

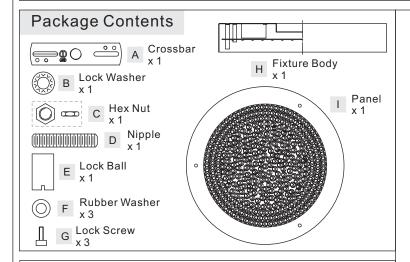

STEP 1 - Install Crossbar and Nipple

- A. Secure the Crossbar (A) to the Outlet Box with Outlet Box Screws. Tighten until snug.
- * Pliers is required on this step.
- B. Thread the Hex Nut (C) onto one end of the Nipple (D). Place the Lock Washer (B) over the Hex Nut end of the Nipple (D) and then thread the Nipple (D) into the center lock hole of the Crossbar (A). Using pliers, thread the Hex Nut (C) against the Crossbar (A) and hand tighten until snug.

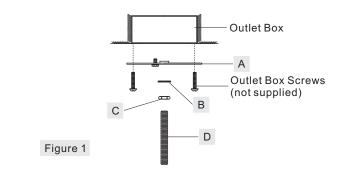


STEP 2 - Test Fitting Fixture Body to Crossbar Assembly

A. Fit the Fixture Body (H) over the Nipple (D) and secure with the Lock Ball (E). The ceiling canopy of the Fixture Body (H) should be snug against the ceiling and the Lock Ball (E). If not, adjust the length of the Nipple (D) by unscrewing the Hex Nut (C) and the


(Step 2 Continued)

Lock Washer (B) unscrewing the Hex Nut (C) and the Lock Washer (B) and then screwing the Nipple (D) in or out of the Crossbar (A) until the correct length is achieved. Once the ceiling of Fixture Body (H) is secure, remove the Lock Ball (E) and Fixture Body (H) and proceed to step 3.

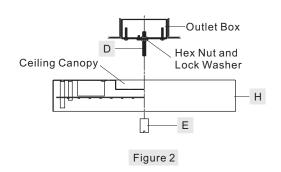

STEP 3 - Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

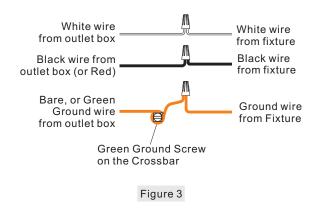


Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2017 Quoizel Inc.

Revised Date: 2017-11-02

STEP 4 - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (H) over the outlet box. Attach the ceiling canopy of the Fixture Body (H) over the Nipple (D) and secure with the Lock Ball (E). Hand tighten until snug.

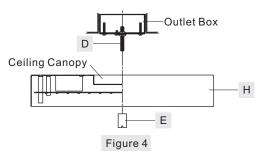

STEP 5 - Attach Panel to Fixture Body

A. Attach the Panel (I) onto Fixture Body (H) with crystal beads upwards. Place Rubber Washers (F) over Lock Screws (G) and thread Lock Screws (G) into Lock Rods until snug to secure the Panel (I). Hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

