

Assembly Instruction Sheet #IS-PCSR1716C For Style PCSR1716C

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (3) G9 Xenon Clear Bulbs (supplied), 40W Maximum.

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


△ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Do not touch the bulb with bare hands use a cloth or glove.

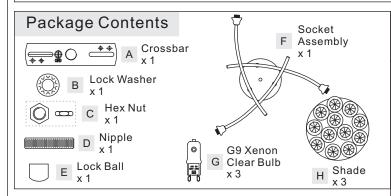


STEP 1 - Install Crossbar

 A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.



STEP 2 - Install Canopy Chain Loop and Nipple

- * Pliers is required for this step.
- A. Thread Hex Nut (C) to the middle of the Nipple (D). Place Lock Washer (B) over the Nipple (D) and then thread the Nipple (D) into the Crossbar (A) until the Nipple (D) is about 0.375" above the Crossbar (A).
- C. Place the Socket Assembly (F) over the Nipple (D) against the ceiling to determine the correct position of the Nipple (D). Thread the Lock Ball (E) onto the Nipple (D). Adjust the Nipple (D) to allow the Socket Assembly (F) to rest against the ceiling when held in place by the Lock Ball (E).
- D. Remove the Lock Ball (E) and the Socket Assembly (F). Tighten the Hex Nut (C) against the Crossbar (A) to secure in place.

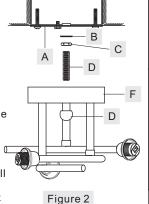


E. Refer to Step 3 for wire connections.

F. Place the Socket Assembly (F) back over the Nipple (D) and secure with Lock Ball (E). Hand tighten until snug.

STEP 3 - Wire Connections

 A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.




STEP 4 - Install Bulbs and Shades

A. This fixture uses G9 Xenon clear bulb (E). Maximum 40 watts. Insert bulb and push snugly into place.

IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.

B. Thread Shade (D) onto the Socket and hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

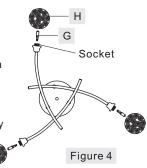


CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

PCSR1716C

 FINISH: POLISHED CHROME




NO. PART NUMBER

2

G3659SH

I1202SC

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

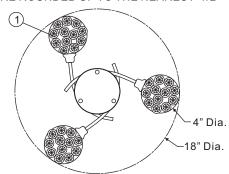

→|4.5" Dia.|•







REQ.

3

REPLACEMENT PART

G9 XENON CLEAR BULB

CRYSTAL SHADE



