


Tools Required

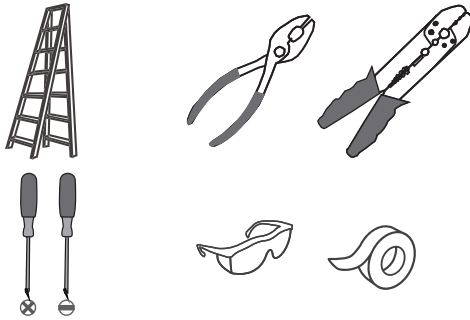

Light Source

40W
LED

**Fixture Height Adjustable
7.75" to 90.75"**

⚠ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

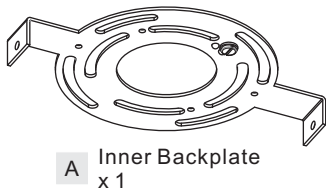

B Lock Screw
x 2

C Outlet Box Screw
x 2

D Wire Connector
x 3



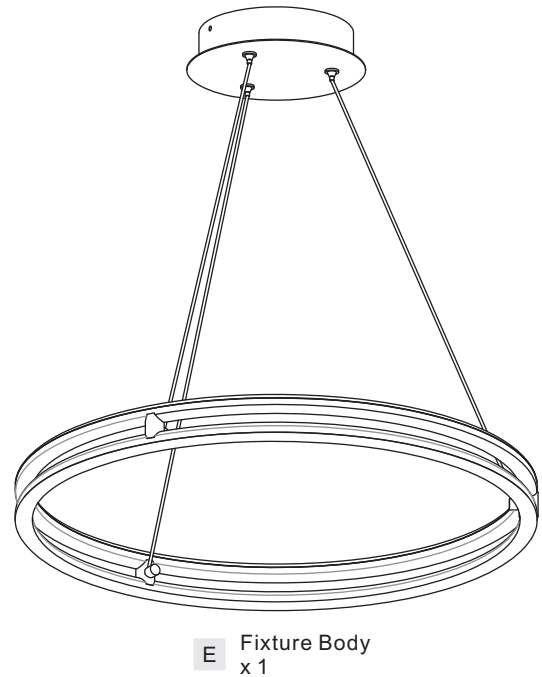


Table of Contents


Adjust Cord Length

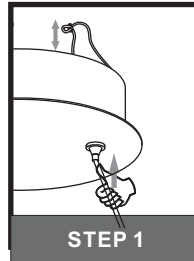


Inner Backplate

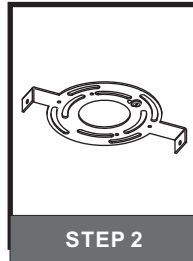


Wiring

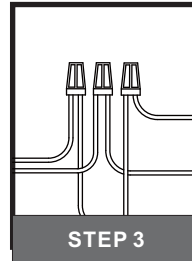


Ceiling Canopy

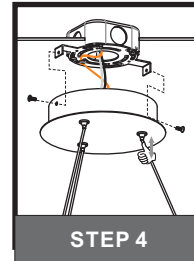


STEP 1

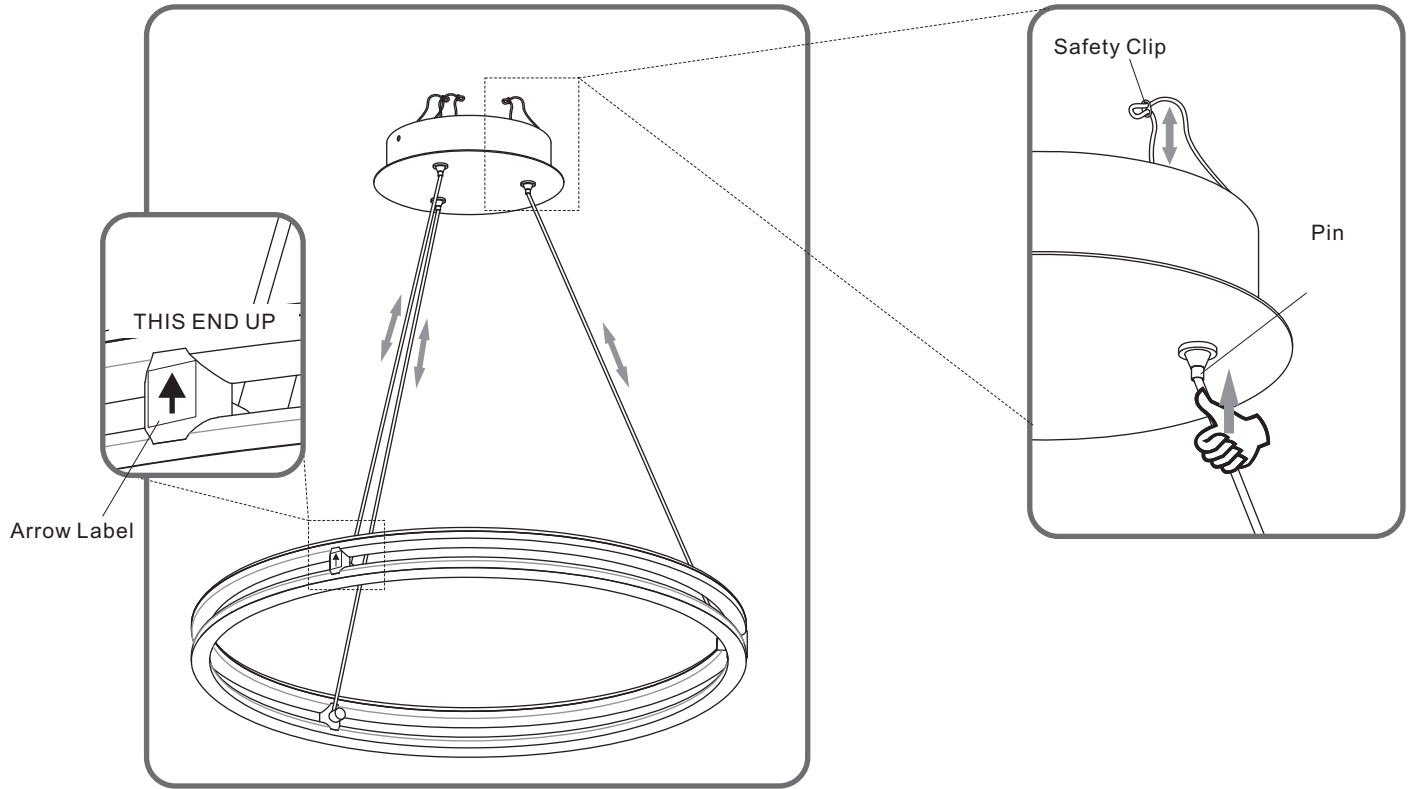

STEP 2

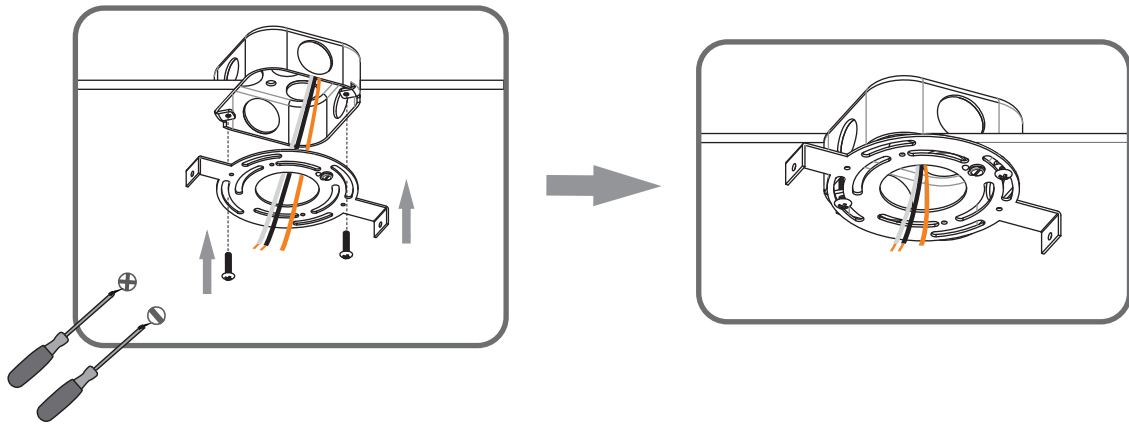

STEP 3

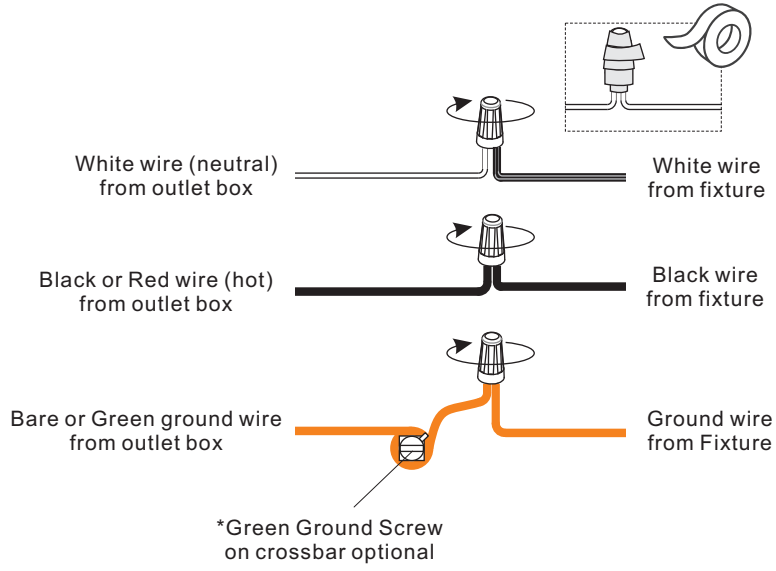

STEP 4

