 
 


Tools Required

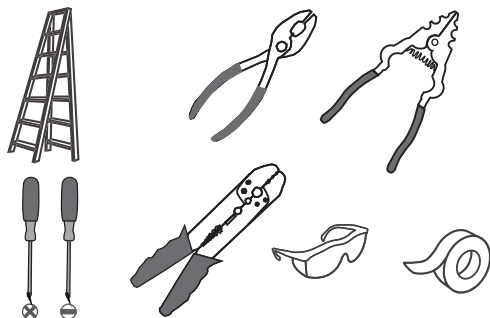

Light Source

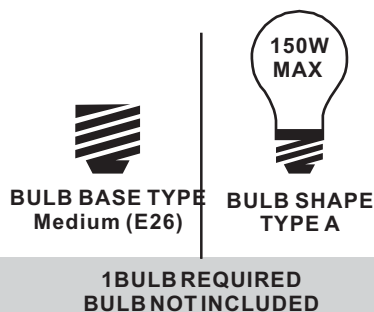

Fixture Height Adjustable 22" to 118"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

 
Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

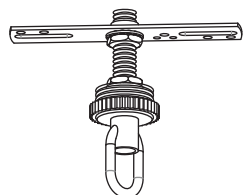

A Crossbar Assembly
x 1



 
B Outlet Box Screw
x 2




C Wire Connector
x 3



D Quick Link
x 2




E Fixture Chain
x 1

 


F Ceiling Canopy
x 1



  G Fixture Loop
x 1

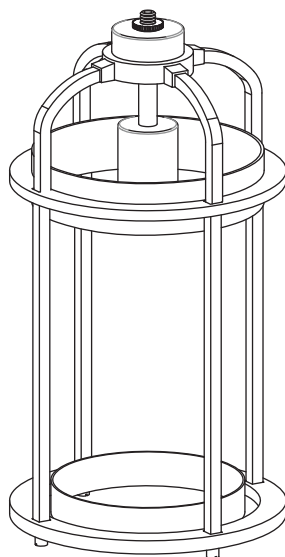 

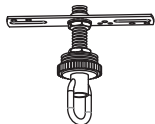 

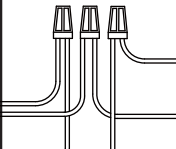 


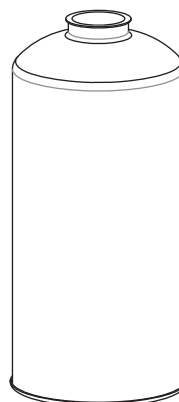

H Fixture Body
x 1



I Glass Shade
x 1


Table of Contents

Shade	Fixture Loop	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
						
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6	STEP 7

STEP 1



1

 Remove glass holder


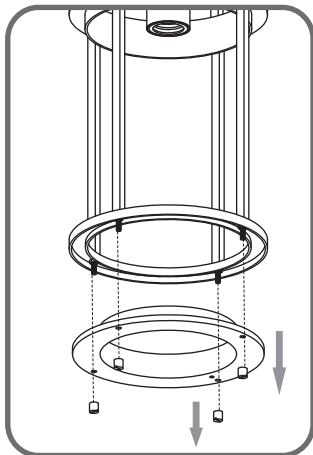


2

  Install glass

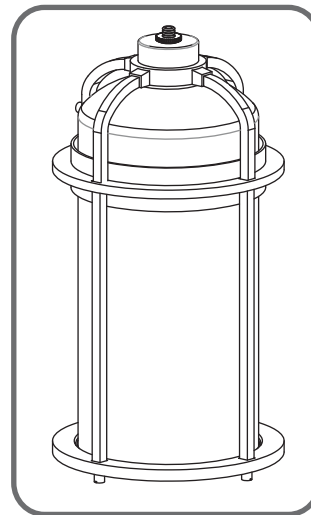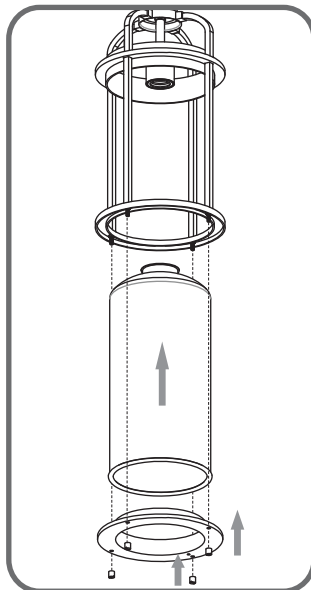

  
STEP 2

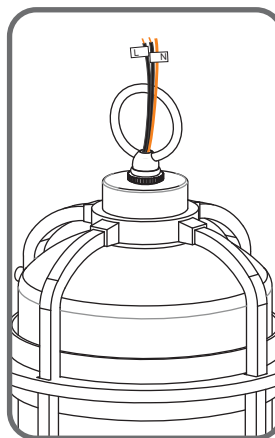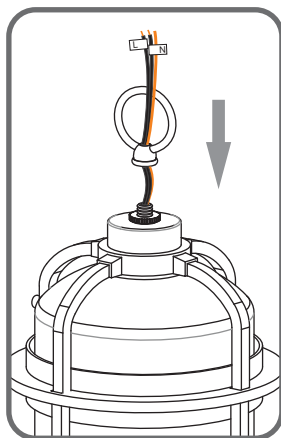

STEP 3


1

 Step 1
Install crossbar assembly

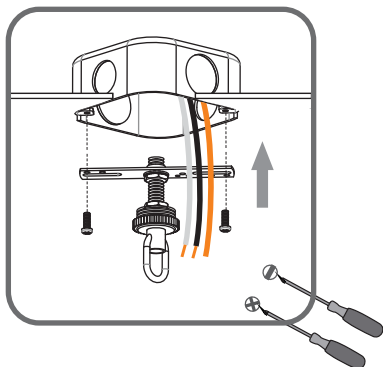


2

 Step 2 - 3
Test fitting ceiling canopy to nipple

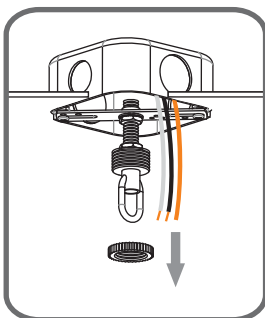


3

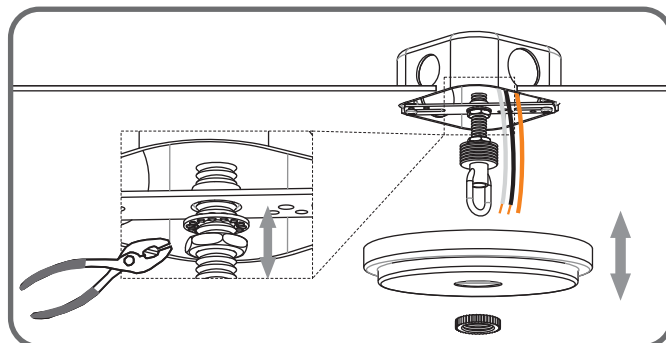 

STEP 4

1

 Step 1
Adjust fixture chain length


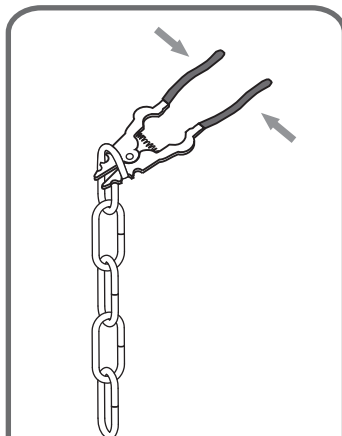


Suggested Chain Length:

8' ceiling: 14" Chain
9' ceiling: 25" Chain
10' ceiling: 36" Chain

2

  
Step 2 - 3
Install Fixture Chain

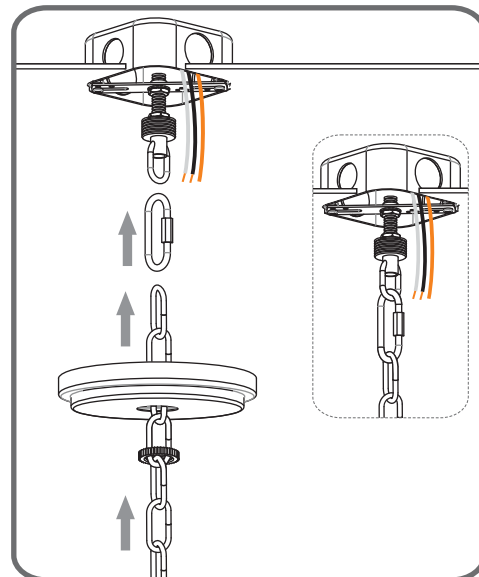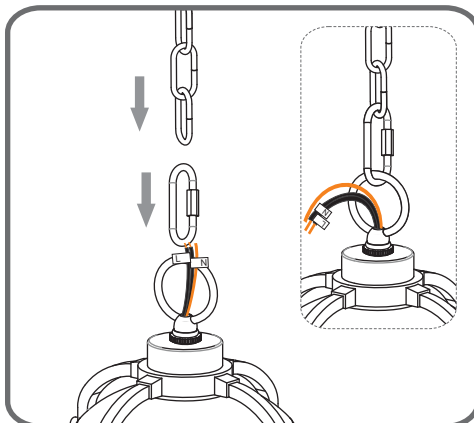


STEP 5

1

 
Step 1
Feed the fixture wires
through the loop

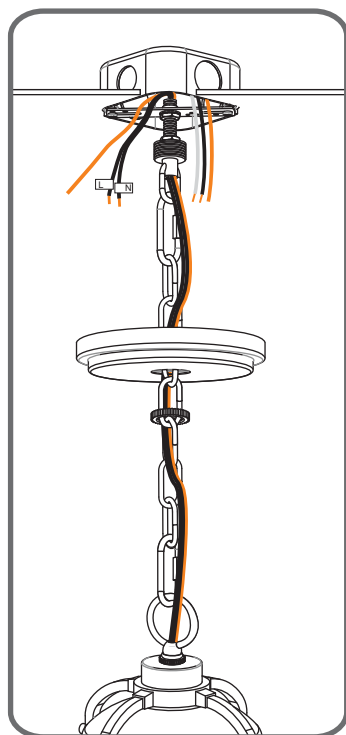

2

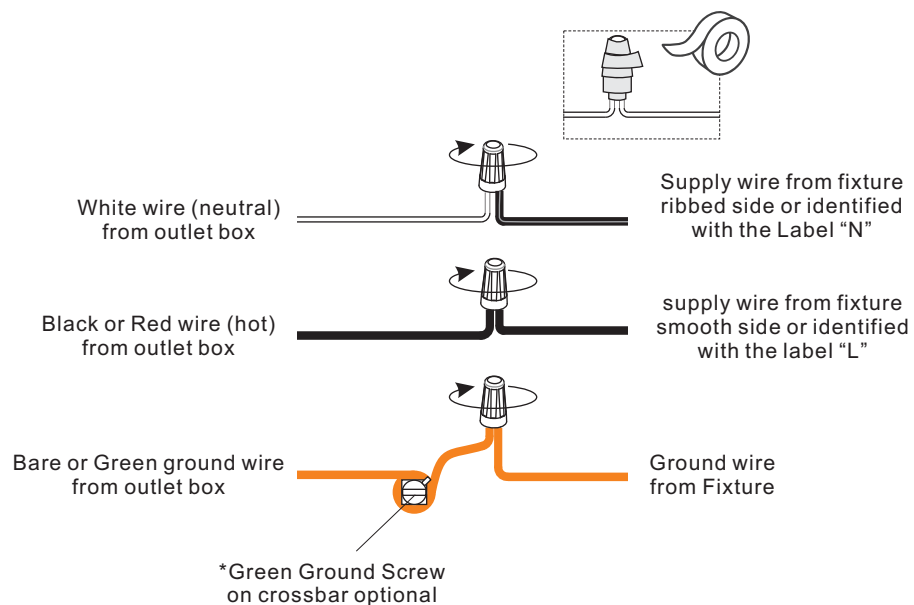 

 STEP 6

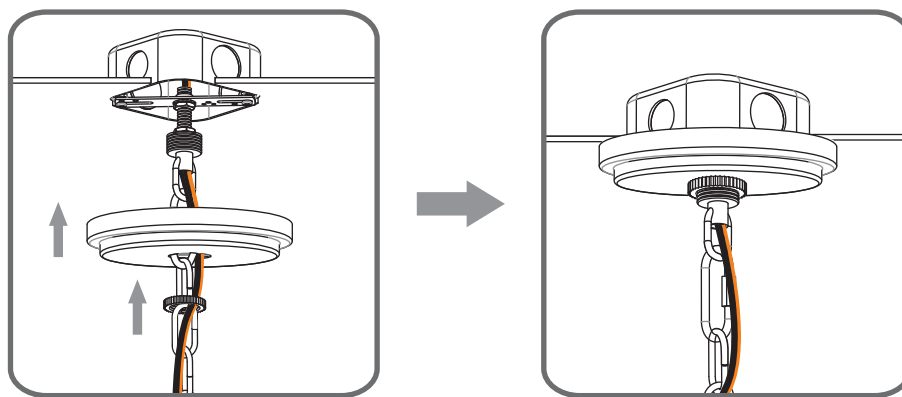

STEP 7

