Installation Guide For Style CRD2816BN

Tools Required


BULB BASE TYPE Medium (E26) BULB SHAPE TYPE A 3 BULBS REQUIRED BULBS NOT INCLUDED


Fixture Height Adjustable 26.5" to 75.75"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

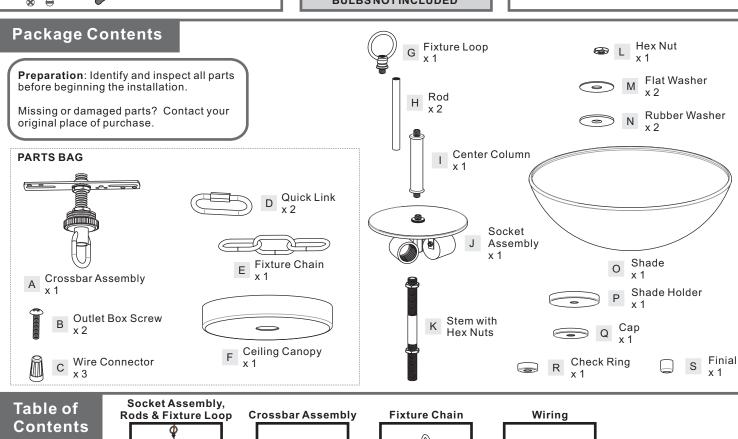


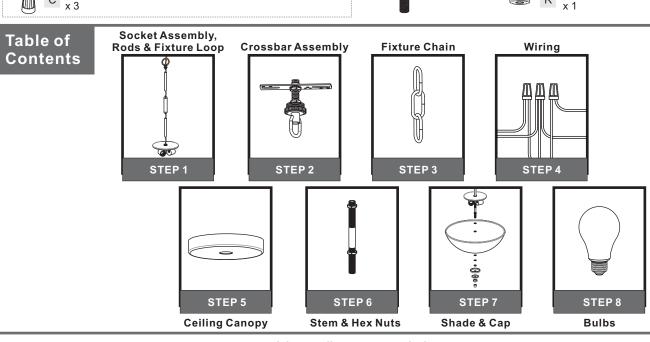


©2019 QuoizelInc.

visit us on-line at www.quoizel.com

Released Date: 2019-07-25

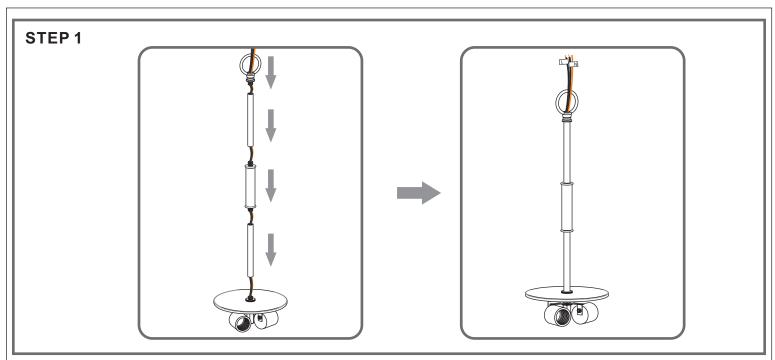

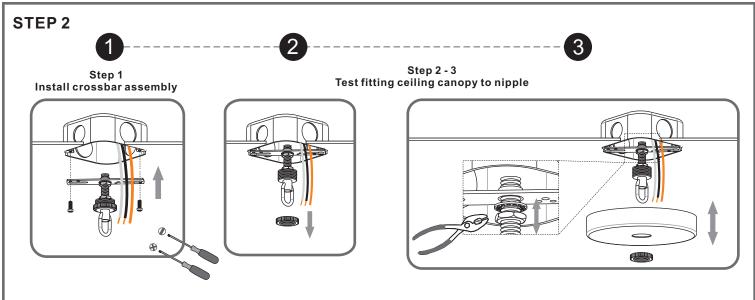







Step 1 Adjust fixture chain length




Step 2 - 3 Install Fixture Chain

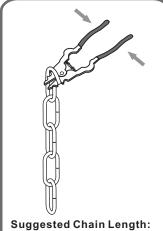



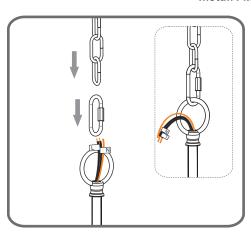

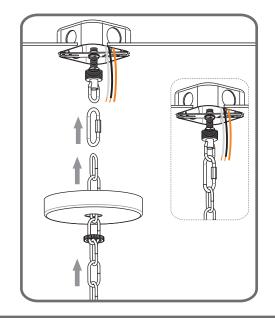



STEP 4



8' ceiling: 9.5" Chain 9' ceiling: 20.5" Chain 10' ceiling: 31.5" Chain

Feed the fixture wires through the loop

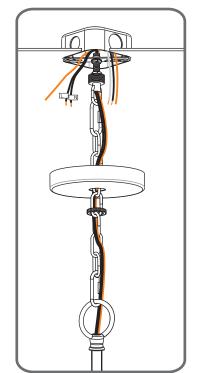

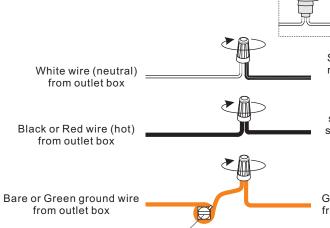

Supply wire from fixture ribbed side or identified with the Label "N"

supply wire from fixture smooth side or identified with the label "L"

Ground wire from Fixture

*Green Ground Screw on crossbar optional

