

Assembly Instruction Sheet #IS-PCLA8532BN For Style PCLA8532BN

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: Integrated LED 36W

Compatible Dimmer Switches: Lutron AYCL-153P or Lutron DVCL-153P.


Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

△ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

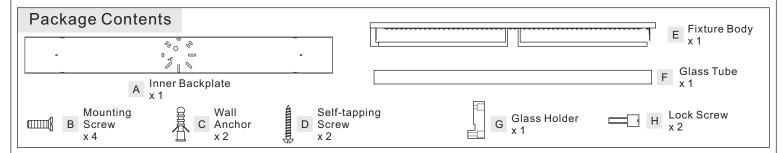


STEP 1 - Install Glass Tube

A. Slip the Glass Tube (F) into the Fixture Body (E). Attach the Glass Holder (G) onto the end of the Glass Tube (F) and secure with Lock Screws (H). Hand tighten until snug with screwdrivers.




STEP 2 - Install the Inner Backplate to the junction box

- A. Place the Inner Backplate (A) onto the wall surface and line up one set of holes onto mounting holes on Outlet Box. Using a pencil, mark the locations for Wall Anchors (C).
- B. Remove the Inner Backplate (A) and drill holes from the marks on the wall surface and then push the Wall Anchors (C) into the holes.
- C. Race all supply wires and ground wire through the Inner Backplate (A) as shown. Position the Inner Backplate (A) back onto the wall, secure by threading the Outlet Box Screws (not supplied) into the mounting holes on the Outlet Box and screw Self-tapping Screws (D) into the Wall Anchors (C). Tighten until snug with screwdrivers.

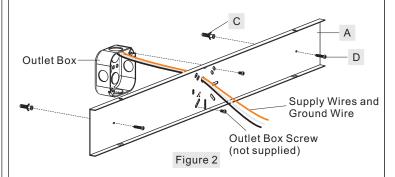

STEP 3 - Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

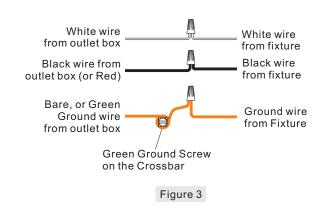

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184

or visit us on-line at www.quoizel.com

Released Date: 2017-09-26

