



Installation Guide For Style CVN8615AGO

Tools Required

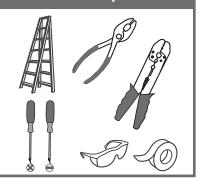

Light Source

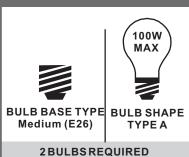

BULBSNOTINCLUDED

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.





Mounting Screw x 4



Outlet Box Screw



C Wire Connector



Self-tapping Screw x2



Inner Backplate



Shade F x 2



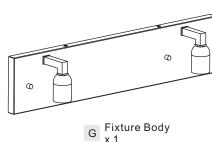


Table of Contents






STEP 1



STEP 2

Fixture Body




STEP 3

Shade & Bulb




STEP 4

STEP 1



Using a pencil (not included), mark the locations on the wall that correspond with the holes on inner backplate. Using a 5/16-inch drill bit (not included), drill pilot holes at marked locations.

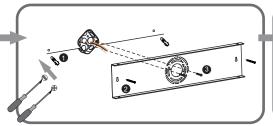

For drywall installations, insert wall anchors into the holes. Otherwise, secure crossbar assembly using self-tapping screws. Then, fully tighten the outlet box screws.

CAUTION: Do not overtighten the screws as damage to the bracket could occur.



Released Date: 2020-01-02

